



## Regulator / rectifier CARR581

Remove the wires from the defect regulator. (As close to the defect regulator as possible) Connect the old wires to the contra-connector supplied with the CARR581. (see picture) The three yellow phase wires can be connected in any order.

You may have a switched power wire (12V, power coming from the ignition lock). You do not have to connect this wire. (This wire is usually black or brown)

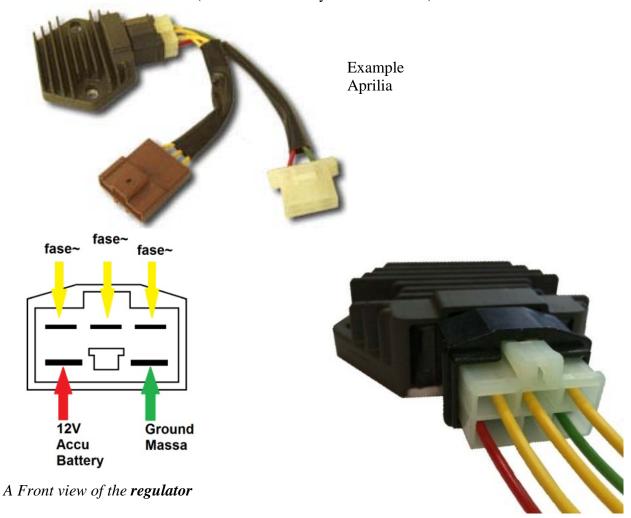

When connecting the fastons, Make sure that the stripped wires do not cross the red line (see picture). The fastons will not properly fit in the contra-connector if the wires cross the red line.

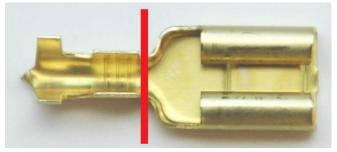



Team-Carmo